

 **13 72 001 Replacing air filter element**

Preparatory work


Removing right side panel

Core activity

(-) Replacing air filter element


▶ **Removing air filter element**

- Pull the air filter element (1) down and out of the air filter box.

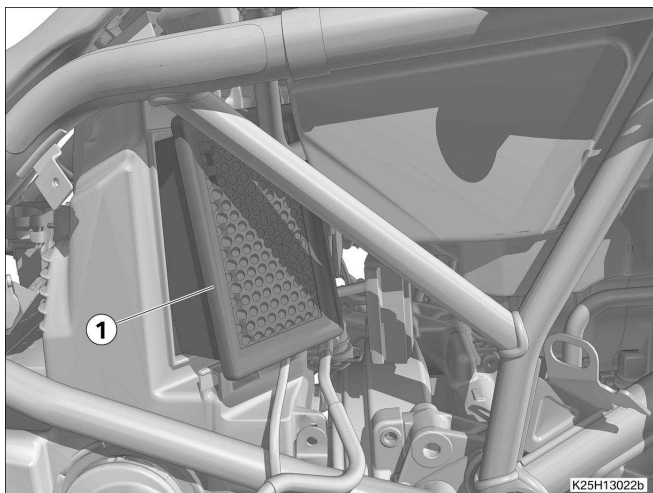

▶ **Installing air filter element**

- Introduce air filter element (1) into the air filter box from below.

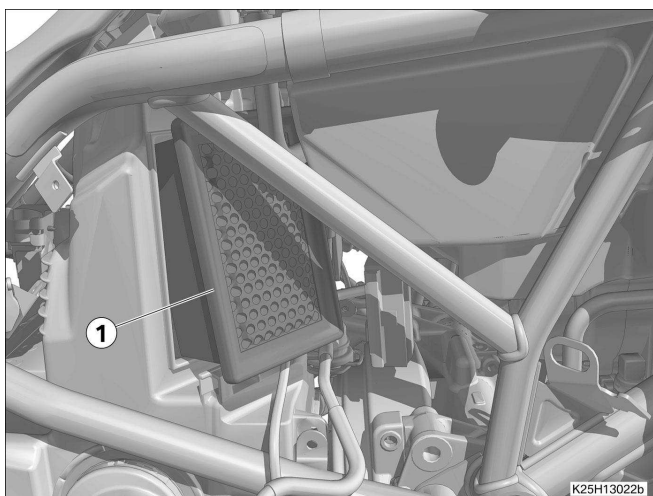

Finishing work

Installing right side panel

Final check of work performed